



POWERTRUSS BRACE - LATERAL BRACING FRAME INSTALLATION

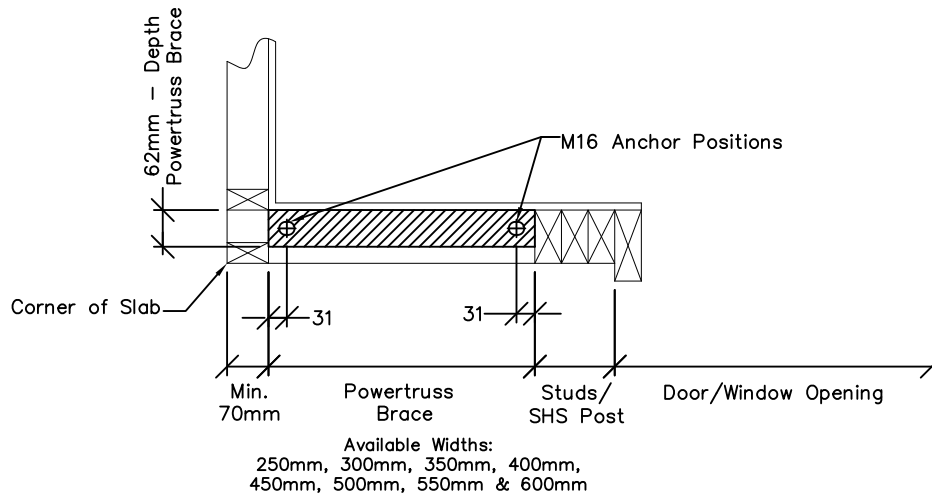

Minimum allowable distance = 70mm from corner of slab to start of Powertruss Frame

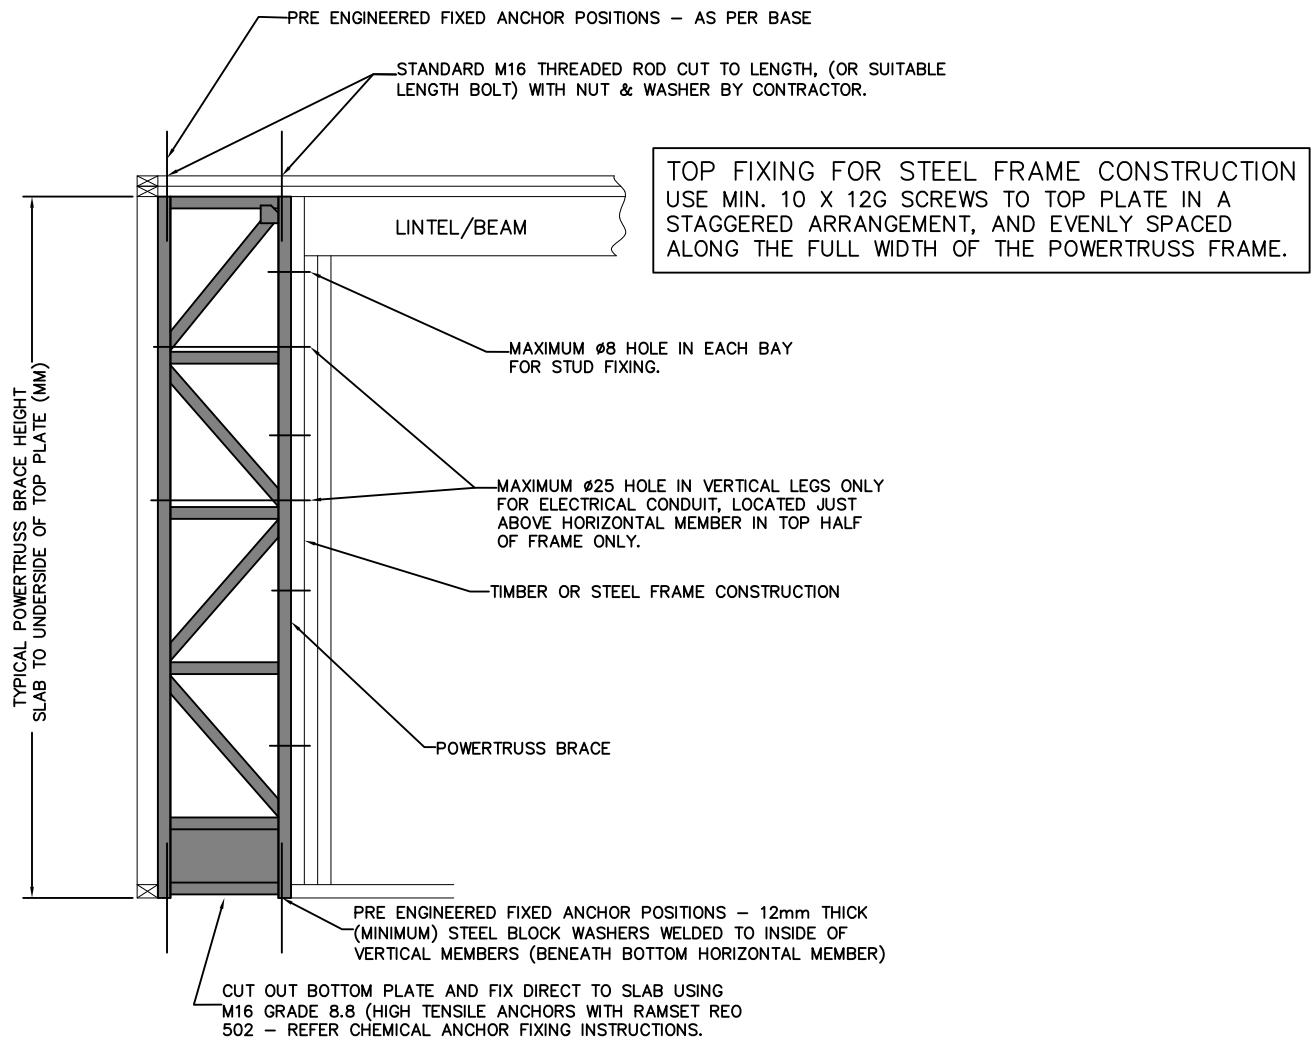

PLEASE ADVISE FINISHED HEIGHT AND WIDTH FOR EACH BRACE REQUIRED

POWERTRUSS WALL BRACING SYSTEM

Queensland (Head Office)
Unit 4-175 Railway Pde
THORNESIDE, QLD. 4158
Phone: (07) 3245 4930
Facsimile: (07) 3245 4838
Email: neil@powertruss.com.au

New South Wales
3 Noongah Road
NELSONS PLAINS, NSW 2324
Phone: 0410 783 191
Email: chris@powertruss.com.au

Victoria
16 Gaine Road
DANDENONG SOUTH, VIC. 3175
Phone: (03) 9799 9122
Facsimile: (03) 9799 9800
Email: alex@powertruss.com.au